

FAN replacement for HX4, HX4R, HX2R

Method #1

Apply pressure on the circle and rotate Counter-Clock Wise direction.



Method #2

- 1) Apply pressure on the two point of the red circle and rotate the cover in the direction of the arrow



- 2) Note the direction of the housing cover



- 3) Lift straight up the housing cover to access the fan



- 4) Remove the 4 mounting screws and unplug the fan connector. Note the color code.

